


1 Remove center console (68-200).

2 Connect tester (d) to vacuum connection (4), color code green, of plug of vacuum lines (30).

3 Pull vacuum line, color code green, from check valve (34) (not on side identified as "engine side").

30 Vacuum lines  
34 Check valve  
d Connection tester

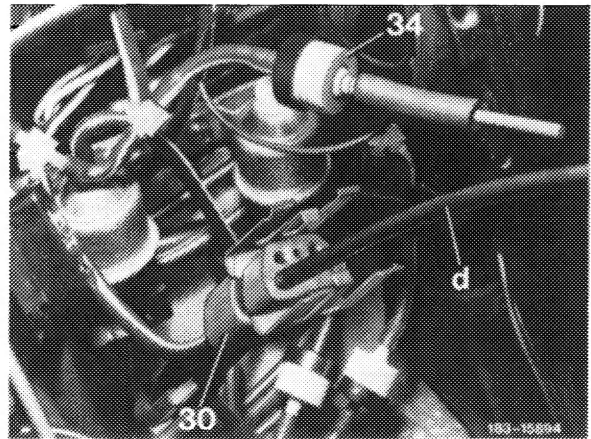

4 Close connection on check valve (34) with fitting and blind plug.

5 Evacuate vacuum circuit.

6 If gauge shows a pressure increase, check vacuum line, color code green, to check valve (34) and to vacuum switch (23) individually.

7 Evacuate vacuum circuit. Then remove blind plug from check valve. Check valve should open, pressure on gauge increases.

8 Install center console (68-200).

